

Instructions

Door Lock Installation

1 Tail piece with grooves face upwards

Hold in position with outer pull insert. Place outer pull on lock stile. Mark and cut cylinder tailpiece 5mm past the door panel.

2

3 Slide door to closed position

Face fit striker and engage the beak to test placement. Align striker as shown.

Loosen beak retaining screw (do not remove) if adjustment is required

FACE FIT STRIKER

ANTI THEFT LUGS
BEAK RETAINING SCREW
BEAK
STRIKER

Ensure anti theft lugs engage when strike is in the locked position

Once the beak is in the correct position, retighten beak retaining screw, do not overtighten

4B NOTE:
The standard striker is used on 4 lite sliding doors, 6 lite stacker doors & corner sliding/ stacker doors (meeting stile changes to D020)

Fit keeper cover

Screw keeper cover in place

4A

Pre-drill holes for the screws

Loosen screw and adjust if required

Fit keeper cover

Screw keeper cover in place

NOTE:
The wide striker is used on 2 lite sliding doors, & 3 lite stacker doors

5 Open door and with the beak in the closed position and the key in the cylinder in place cover over handle. Rotate key if necessary to engage cylinder into lock

Secure cover with cover fixing screws.

Please note that drawings are not to scale

Instructions | Door Lock Installation | Mk-1 | 25 Feb 2010

Confidentiality Notice: This document and the information it contains are copyright and confidential to Trend® Windows & Doors Pty Limited. Disclosure, use and copying in any form whatsoever, except as authorised by Trend® Windows & Doors in writing, are strictly prohibited. Patents and Design Registrations pending.